## ARSCO Manufacturing Co.

Model: FT90HL

Standard Material: 18 Ga. CRS

Other Material Gauges Available:16 CRS, 14 CRS, . 06 Aluminum, Stainless Steel (Slots Only - No Louvers)

Finish: Arsco Minitex White

Accessories (Not Shown):

- Wall Cleats (Included)
- Floor Angles (Included)
- Tek Screws (Included)
- End Cap
- External Trim Piece
- Inside Corner
- Outside Corner


# Measuring

#### **Pre-measurement Conditions (Choose One):**

- 1. There is currently a cover in place, the cover will stay in place, and the new ARSCO cover will mount over the current cover Y/N.
  - If Yes, choose a height 2.5" higher than the height of your current cover to allow easy installation of our mounting angles. Those heights are 6", 8", 10", 12" and 16".
- 2. There was a previous cover in place, the previous covers' wall mounting angle will stay in place AND has at least .125" clearance between the wall and the angle Y/N.
  - If Yes, add .25" to the height of the current wall bracket to allow for easy installation of your cover.
- 3. There is currently no cover and no mounting angles in place Y/N.
  - If Yes, add 2.125" to the height of your heating unit.
- 4. Is your unit WTW (Wall to Wall) Y/N?
  - If Yes, subtract 1.5" from your WTW Length dimension and order a left and right Inside End Angle (IEA) or 2 (EXT) External Trim Pieces.
- 5. Does your unit require End Caps Y/N?
  - If Yes, add 1" to your Length dimension, and order a right and/or left end cap. Choose end caps welded or loose (we suggest welded.)

## **Measuring Instructions**

- A. LENGTH (Choose One) Please follow instructions in pre-measurement conditions
- 1. WTW (Wall to Wall)
  - a. Measure WTW Length and subtract 1.5" from that measurement = Length
  - b. Choose from the following
    - 1.) 2 (EXT), External Trim Pieces, Trims over outside dimensions of cover (no mounting)
    - 2.) 1 (REC), Right End Cap WELDED, 1 (EXT), External Trim Piece
    - 3.) 1 (LEC), Right End Cap WELDED, 1 (EXT), External Trim Piece
- 2. End Caps Needed
  - 1. (CBE), Cap both ends welded)
  - 2. (CBE L), Cap both ends Loose, (must be attached on site with sheet metal screws)
  - 3. (LEC), Left End Cap
  - 4. (REC), Right End Cap
- B. HEIGHT Please follow instructions in pre-measurement conditions
- **C. DEPTH** Add 1" to your largest depth dimension (From back wall to the front of your heating unit)

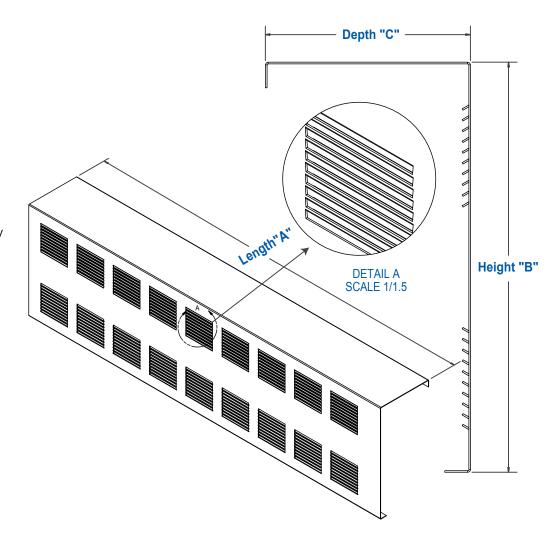

## **Other Accessory Instructions**

- 1. Inside End Angle (IEA)
- 2. 90 Degree Inside Corner (subtract your stated cabinet depth from the length of any cover that this inside corner will mount with)
- 3. 135 Degree Inside Corner (subtract the stated cabinet depth from the length of the cover this inside corner mounts with)
- 4. 90 Degree Outside Corner (provide end to corner measurements. The outside corners will be 1.25" longer than the depth in each direction.)
- 5. 135 Degree Outside Corner (provide end to corner measurements. The outside corners will be 1.25" longer than the depth in each direction.)